


Wiring Diagram G.E. Motor

Diagram shows single motor connection. Use duplicate terminals to connect a second motor.

Main Feed: Connect 120 VAC across terminals L1 & L2/N, and configure motor to voltage used. Terminals T5 & T8 feed the Cap/Start winding, ML1 and ML2 are to motor run windings

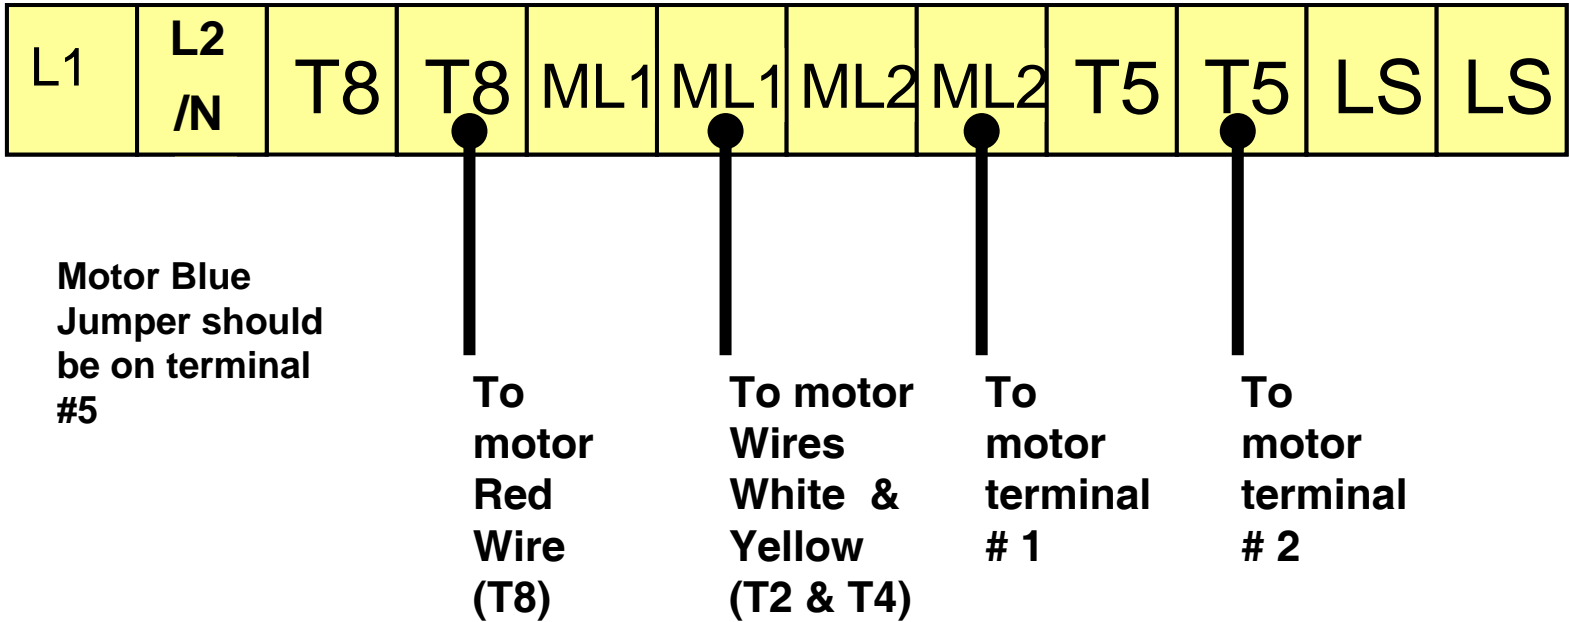

Wiring Diagram G.E. Motor

Diagram shows single motor connection. Use duplicate terminals to connect a second motor.

Main Feed: Connect 240 VAC across terminals L1 & L2/N, and configure motor to voltage used. Terminals T5 feeds the Cap/Start winding, ML1 and ML2 are to motor run windings

